



MEGGITT

# MachineryMate™ 200 operating guide

Handheld vibration meter



**Meggitt Sensing Systems**  
20511 Seneca Meadows Parkway, Germantown MD 20876, USA

Meggitt (Maryland), Inc d/b/a Meggitt Sensing Systems

91397 Rev A.1 02/14

Tel: +1 (301) 330-8811  
Tel: +1 800 WILCOXON  
Fax: +1 (301) 330-8873  
[www.meggittsensing.com](http://www.meggittsensing.com)  
[www.meggitt.com](http://www.meggitt.com)



## Contents

<b>1.0 Introduction</b> .....	<b>3</b>
<b>2.0 Operation</b> .....	<b>3</b>
2.1 Changing the probe tip.....	3
2.2 Taking a reading.....	3-6
2.3 Settings menu .....	5-6
<b>3.0 Maintenance and care</b> .....	<b>7</b>
<b>4.0 Accessories and options</b> .....	<b>7</b>
<b>5.0 Technical assistance</b> .....	<b>7</b>
5.1 Technical assistance.....	7
5.2 Customer service .....	7

## 1.0 Introduction

The MachineryMate™ 200 is a simple to use vibration monitoring and analysis tool that allows easy display of vibration signals. The MAC200 automatically performs vibration analysis functions based on machine running speed to help diagnose faults such as unbalance, misalignment and looseness.

The system is designed to enable users to take vibration measurements from machinery assets (pumps, motors, fans and bearings). The meter displays vibration frequency plots and allows vibration severity and bearing condition to be monitored.

### 1.1 Control buttons

Turn the meter on by pressing the POWER button. The unit will automatically turn off if not used for 1 minute (this time period can be increased up to 60 minutes using the Setup Wizard).

### 1.2 Batteries

The MAC200 requires two AA size batteries which can be replaced by removing the battery compartment cover (held in place by six screws). Use a #1 philips head screwdriver to loosen and tighten the screws. Make sure the gasket is properly sealed when screwing in the battery door to prevent compromising the IP67 rating.

### 1.3 Service

The MAC200 contains no user serviceable parts. In the unlikely case of malfunction, please return unit to Meggitt Sensing Systems.

## 2.0 Operation

### 2.1 Changing the probe tip

To prevent damage, the probe tip should only be tightened using the machined flats on the probe tip's mounting plate, with 8 mm and 15 mm wrenches. Do NOT hold or clamp the case of the meter when tightening the probe tip or magnet. This will cause damage and void the warranty.

### 2.2 Taking a reading

Taking a reading displays overall vibration numbers for an overall view of the machine's condition.

Press the POWER button to turn the unit on and hold the tip of the meter against the machine to be measured. Press the POWER button again to take a reading.

#### 2.2.1 Vibration readings

Once a reading has been taken the display shows three color coded values to indicate alarm status.

- ISO value (velocity in mm/second or inch/s)
- Bearing noise in BDU (Bearing Damage Units)
- Total g (acceleration)

#### ISO value (mm/s or in/sec)

The ISO value (mm/s or inch/s) is the large number displayed at the top of the screen is the RMS (average) of the vibration velocity in the frequency band 10 Hz to 1 kHz (600 – 60,000 RPM) or 2 Hz – 1 kHz (120 –



60,000 RPM), as specified by ISO standards. The correct frequency band is automatically selected based on running speed.

The ISO value background is color coded according to the ISO 10816-1 vibration velocity level chart, according to the size and type of machine.



### Bearing noise (BDU)

The bearing noise (high frequency vibration) is shown in Bearing Damage Units (BDU), where 100 BDU corresponds to 1 g RMS (average) vibration measured above 1 kHz. BDU is a measure of the wear state of the bearings in the equipment being monitored. The higher the number, the more worn the bearing.

1 g of high frequency vibration (100 BDU) corresponds to a high level of bearing noise and can be considered indicative of a damaged bearing. Bearing noise can be considered roughly equivalent to percentage of bearing wear.

Default alarm settings (can be changed in Advanced Settings menu)

- Red background above 100 BDU
- Yellow background between 50 and 100 BDU
- Green background below 50 BDU

### Total acceleration (g)

This is the average RMS value of the total vibration acceleration measured by the meter over its entire frequency range (2 Hz to 10 kHz). The reading is shown in units of g (Earth's gravitational constant, 1 g = 9.81 m/s<sup>2</sup>).

### 2.2.2 Vibration analysis

Press the SQUARE button again to display the readings of vibration velocity (mm/s or inch/s) broken down into each of three bands.





The display shows the vibration level in frequency ranges based on multiples (1X, 2X and 3X) of the specified machine run speed shown beneath the bars.

**Note:** In order to perform analysis it is important that the running speed of the machine is entered correctly. This can be done with the Setup Wizard.

The frequency ranges of the VA bands are based on the following multiples of running speed:

**1X = Unbalance**

The level of vibration in the frequency band based on the running speed is usually indicative of how well balanced the machine is. Large vibrations at the running speed indicate that the machine is out of balance. Even a very well balanced machine will typically show some vibration at the running speed but the figure should ideally be quite low (typically less than 2 mm/sec for a medium sized machine).

**2X = Misalignment**


A high level of vibration in the frequency band centered at twice the running speed is a possible indication of misalignment. This is based on the fact that shaft misalignment can result in a double peak in the waveform due to two different centers of gravity (one from each shaft). The accelerometer picks up a peak as each center of gravity passes by, resulting in two positive and two negative peaks each revolution of the shaft. This typically gives rise to a vibration signal at double the running speed of the machine.

**3X = Looseness**

High vibration in the frequency band centered at three times running speed indicates looseness (mounting bolts, weak foundations, etc). It is not usual to see third order vibration in a machine unless there is structural looseness that is being excited by the vibration of the machine.

**2.2.3 Frequency spectrum**

Press the SQUARE button again to display vibration levels as a frequency spectrum from 0 to 1 kHz.

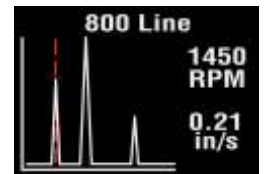

The heights of the peaks indicate RMS vibration level (in/s or mm/s) at each frequency point in the spectrum.

The readings to the right of show the frequency (Hz or RPM) and the RMS vibration level (in/s or mm/s) at the position of the cursor (red dotted line). Move the cursor with the arrow buttons.

Press the arrow buttons to increase the resolution of the frequency axis from 100 (10 Hz or 600 RPM resolution) to 800 lines (1.25 Hz or 75 RPM resolution). Increasing the resolution zooms into the frequency spectrum. Scroll using the arrows to display the full spectrum at the higher resolution.


**2.3 Settings menu**

The Settings menu can be accessed by pressing and holding down the SQUARE button for two seconds.

Navigate the menu with the arrow buttons. Press the SQUARE button to select a menu item.

**2.3.1 Setup Wizard**

Setup Wizard allows the machine running speed to be entered and the ISO alarm levels to be set automatically according to the size and type of machine to be monitored.

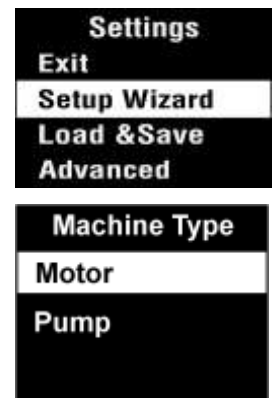



The first screen shows the currently selected running speed in the pre-selected units (Hz or RPM). Change the running speed with the arrow buttons.

Press the SQUARE button again to select machine type (motor or pump). If motor is selected the size must be selected (under or over 300kW). If pump is selected, specify whether it has an integrated or external drive unit.

Selecting the machine type and size allows the ISO alarm levels to be set accordingly, as does specifying the type of mounting (rigid or flexible).

Unless a machine is bolted to a concrete floor, its mounting should be considered flexible. Most motors and pumps are mounted on some kind of frame or structure and should be considered flexibly mounted.

### 2.3.2 Load and Save readings

Press the SQUARE button to select Load & Save. Save Reading opens a screen which allows the user to choose from one of three Memories in which to save the reading. Selecting Load Reading lets the user load a previously saved reading for further review. Demo Data loads two pre-stored demonstration vibration data.

### 2.3.3 Advanced settings

Use the arrow buttons to scroll through the options, and the SQUARE button to select.

#### **BDU settings**

Change the alarm levels at which the BDU readings change color

#### **Units**

Sets velocity readings to be displayed in mm/s or inch/s.  
Sets Run Speed to Hertz, RPM, or CPM.

### 2.3.3 Device settings

Use the arrow buttons to scroll through the options, and the SQUARE button to select.

#### **Auto Off Time**

Can be set from 1 to 60 minutes, in one minute increments




#### **Brightness**

Can be set from 1 (least) to 100 full)

#### **Language**

#### **Graph mode**

Displays the frequency spectrum as either a bar or line graph.

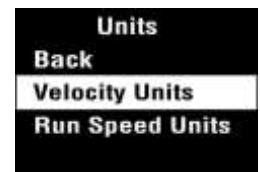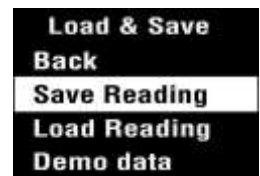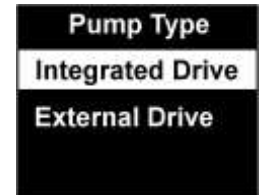



### **3.0 Maintenance and care**

Wipe the meter with a soft towel and lukewarm water. Do not place in dishwasher or other cleaning device or use detergents to clean housing. Do not subject meter to water at or above 122°F (50°C). Care must be taken when the batteries are changed.

Do not drop the instrument. Damage to the probe tip/accelerometer and/or OLED display may occur.

No internal user serviceable parts

### **4.0 Accessories and options**

#### **Standard accessories**

Carrying case with foam insert  
Standard stinger  
Extended length stinger  
Protective magnetic boot

### **5.0 Technical assistance**

#### **5.1 Technical assistance**

For technical assistance, please contact Meggitt Sensing Systems at 301-330-8811 or email [MachineryMate@meggitt.com](mailto:MachineryMate@meggitt.com).

#### **5.2 Customer service**

For customer service, please contact Meggitt Sensing Systems at 301-330-8811, or email [MachineryMate@meggitt.com](mailto:MachineryMate@meggitt.com).